







# PS011A SERIES





LED PUSH BUTTON SWITCH

## DIMENSION

 
 
 
 
PS011A-N11TAA □□

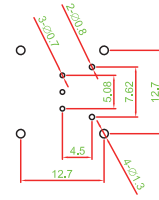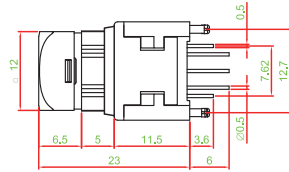





PS011A-N11TBB □□

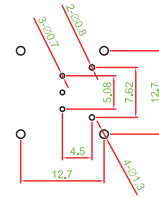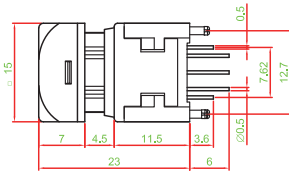    





PS011A-N11TBC □□

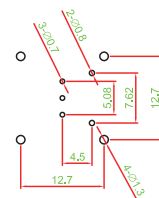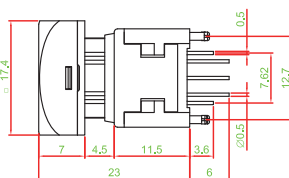    





PS011A-N11TCD □□

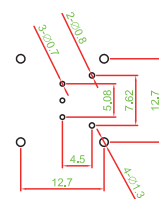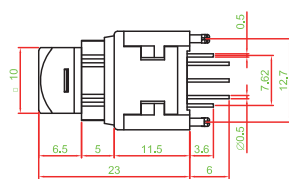    





PS011A-N11TBB-NRGB

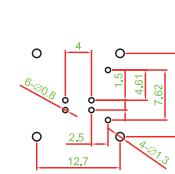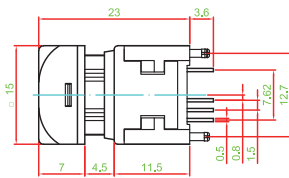    





PS011A-N11TBB-2NRGB

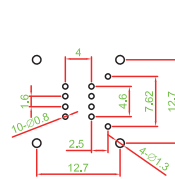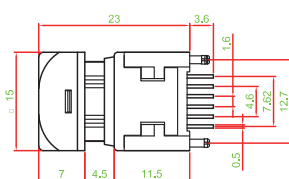    

PS011A-N11TBB-RGB

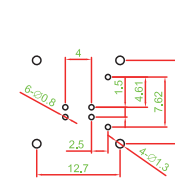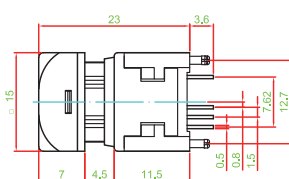    


PS011A-N11TBB-2RGB

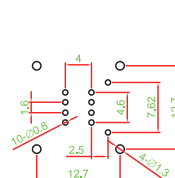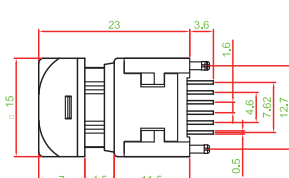    


► **DIMENSION**

 PS011A-N11NBE-4NRGB

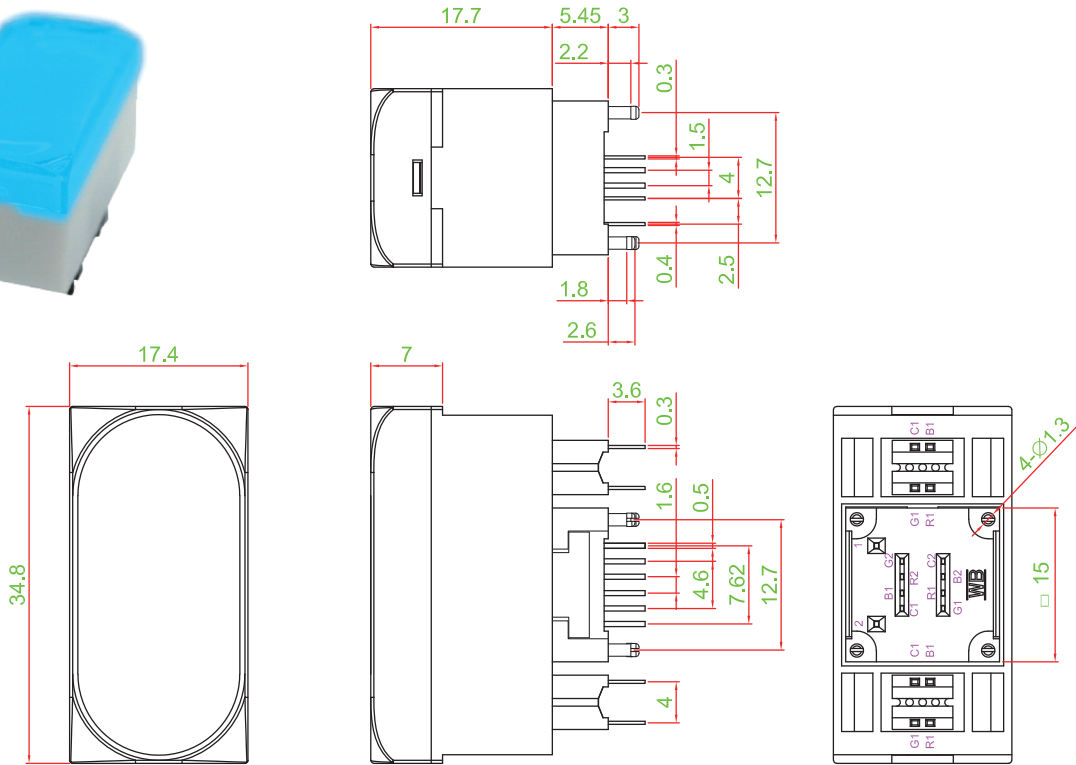

► **INSTALLATION INSTRUCTIONS**

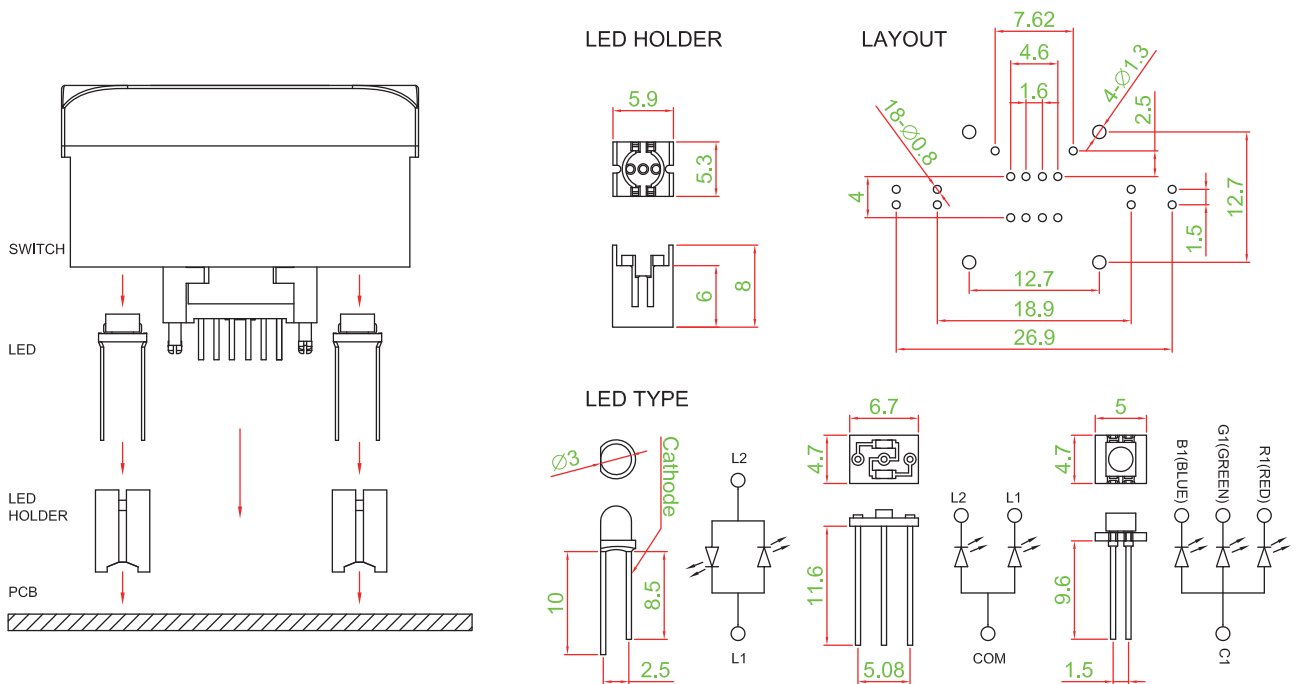 


# PS011A SERIES


LED PUSH BUTTON SWITCH

## ▶ PANEL MOUNT TYPE (FOR CAP SIZE A, B AND D TYPE)

 
AUTO TYPE

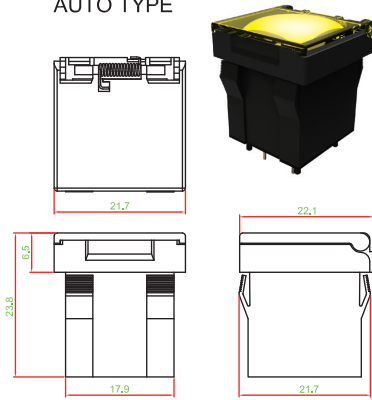

MANUAL TYPE

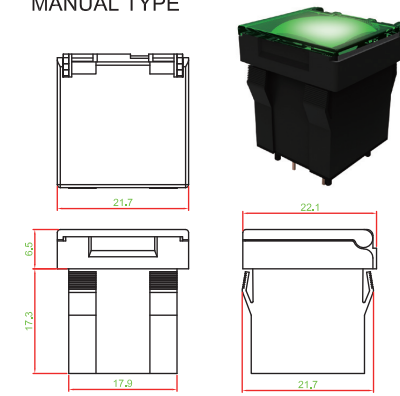 


PANEL CUT OUT

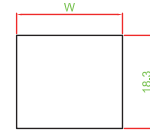 


PANEL THICK	W
0.75 ~ 1.25	20.1 ~ 20.3
1.25 ~ 2.0	20.3 ~ 20.5
2.0 ~ 3.0	20.5 ~ 20.7

## ▶ LOCK TYPE

 PS011A-L11NAA □ □

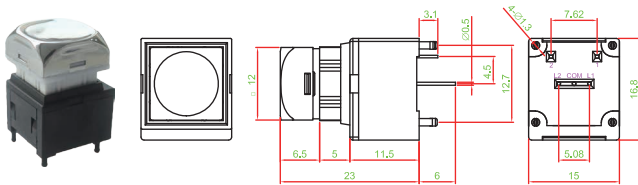


PS011A-L11NBB □ □

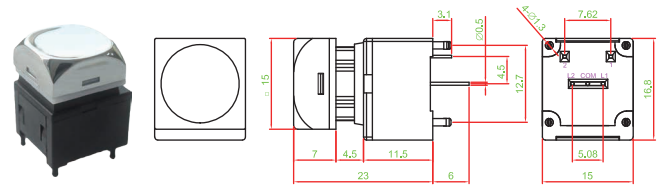 

## ▶ CAP TYPE

 
A1 TYPE




A2 TYPE



 
A3 TYPE




B1 TYPE

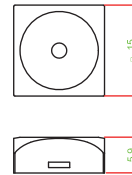 


B2 TYPE

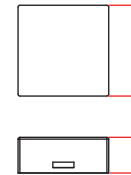 


B3 TYPE

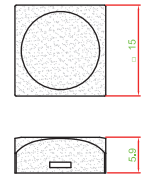 


C1 TYPE

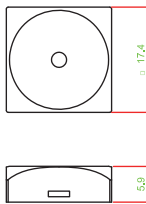 


C2 TYPE

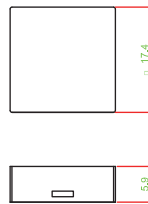 


C3 TYPE

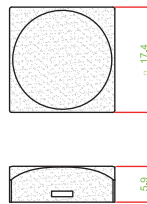 


D1 TYPE

 

D2 TYPE

 

D3 TYPE


 


## ▶ CIRCUIT

SWITCH



  LED

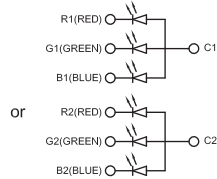

OR

